

# Magnetic drive pumps

Magnetic drive pumps with an excellent balance of features and performance



The SMX is a horizontal self-priming magnetic drive pump made from reinforced plastic.

Our original self-radiation structure enhances resistance to abnormal operations.

# Versatile self-priming magnetic drive pump with enhanced durability under abnormal operation



The SMX is a horizontal self-priming magnetic drive pump made from reinforced plastic. Our original self-radiation structure (Patented) enhances resistance to dry running, cavitation, and closed-discharge operation.

In addition, the use of standard motors extends the range of application.



SMX-543 SMX-441 SMX-220




#### **Expanded versatility**

The SMX has a modular structure to handle liquids with high specific gravities. Use of standard motors extends the range of liquid application.


#### Easy maintenance

The pump wet end can be removed from the motor as a complete assembly without dismantling, thanks to an additional rear casing support. The pump wet end comprises the minimum number of parts for easy maintenance.

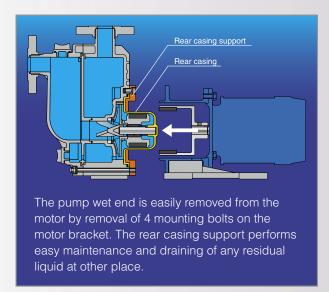

#### Enhanced durability under abnormal operation

Our original self-radiation structure (Patented) efficiently disperses bearing friction heat to protect the pump under abnormal operating conditions. In addition, our non-contact structure prevents contact between rear thrust face and bearing, to eliminate heat buildup during dry running.

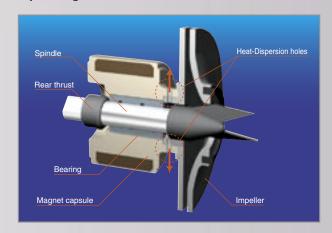

#### **Fast self-priming**

The SMX requires no external self-priming chambers or valves. The gas-liquid separation design ensures fast self-priming. An exceptional self-priming duration of up to 4m in only 90 seconds is now possible.

#### **Examples of application**

## Pumping up from underground tank


- Underground tank at chemical plant.
- Underground tank or pit of waste plant.


## Pumping up and out from top of tank and tanker truck


- Transferring etching and plating chemical from chemical bath.
- Sucking up chemical from truck.
- Pumping up from top of tank.

## Transferring chemical from tank to tank

- Transferring from main tank to daily tank.
- Refilling chemical from drum to tank.

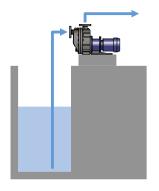


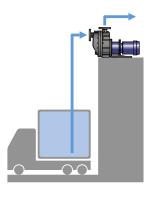

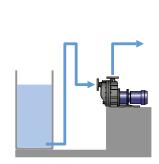



# Reliability and performance are enhanced by our unique design

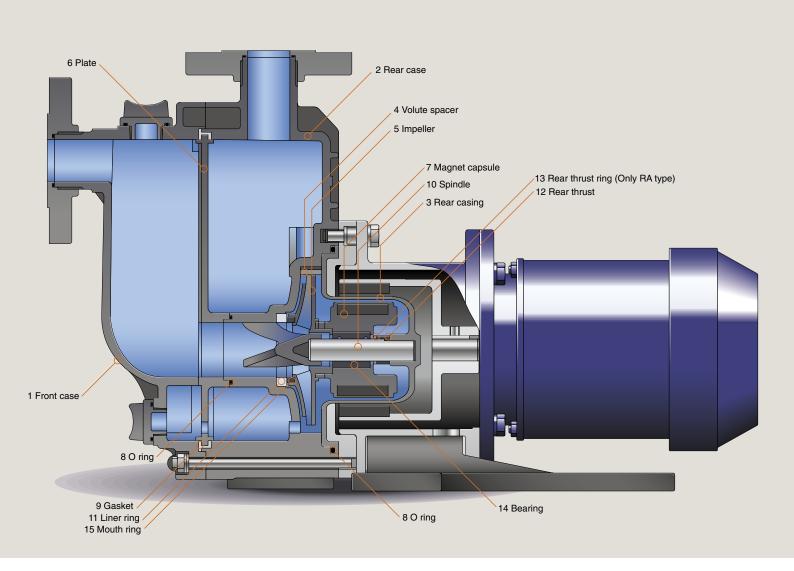

### **Wet-end materials**

			Model					
	Name of part		CA	RA	KA			
1	Front case							
2	Rear case							
3	Rear casing		GFRPP					
4	Volute spacer	Note1						
5	Impeller							
6	Plate							
7	Magnet capsule		PP					
8	O ring		FKM/EPDM					
9	Gasket		· ·					
10	Spindle		High purity alumina ceramic SiC					
11	Liner ring		Alumina ceramic					
12	Rear thrust	SMX-22, 44	CFRPPS					
		SMX-54	High purity alumina ceramic		SiC			
13	Rear thrust ring	Note2	-	High purity alumina ceramic	-			
14	Bearing		Carbon	PTFE (With filler)	SiC			
15	Mouth ring		PTFE (With filler)					


Note1 : SMX-22□T and 54□T do not have a Volute spacer

Note2: Exclusive for SMX-22RA, 44RA





## **Principles of Self-Priming**

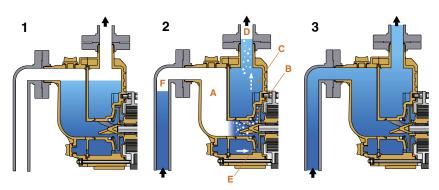


- **1** Prime the pump with liquid.
- 2 On starting, the pump will suck both gas and liquid into its inlet. This mixture moves through front case A to the front casing, where it is agitated by the impeller. The mixture is discharged through pump chamber B to rear case C, where gas and liquid separation then occurs. Gas is bled from the discharge port D while some liquid is retained. Liquid in the rear case C is fed back through circulation hole E to the front casing, where it is again mixed with entrained gas by the impeller. This recirculation & bleeding process continues until gas from the suction side F is completely expelled.
- **3** Once all gas is expelled, normal centrifugal pump operation is resumed. Sufficient liquid remains in the casing for subsequent self-priming once the pump is stopped.

#### **Specifications**

Model	Connection Suction X Discharge (mm)	Impeller	Min. capacity (L/min)	Standard specification (L/min-m)	Max. capacity (L/min)	Motor (kW 2p)	Resisting pressure limit (MPa)	Mass (Less motor) (kg)
SMX-220		V		80 - 8.5	90	0.37		13
SMX-221	25 X 25	Т	10	100 - 13.0	160	0.75	0.28	15.5
SIVIX-221		V		80 - 8.5	140			
SMX-222		Т		100 - 13.0	160	1.5		16
SMX-441		T		150 - 12.4	190	0.75		16
SMX-442	40 X 40	Т	10	150 - 12.4	280	1.5	0.33	16.5
SMX-542		V		200 - 17.0	230	1.5		
014V 540	F0 V 40	T	20	250 - 18.0	440	2.2	0.43	24
SMX-543	50 X 40	V		200 - 17.0	410			
OMY 545	1	Т		250 - 18.0	440	4.0		00
SMX-545		V		200 - 17.0	410	4.0		32

- The self-priming height limit noted above refers to a liquid equivalent to fresh water at 20°C. The self-priming height limit varies with the liquid temperature and the type of liquid.
   Temperature range of handled liquid: 0 to 80°C (The self-priming height limit decreases at high temperatures.)

#### **Pump identification**

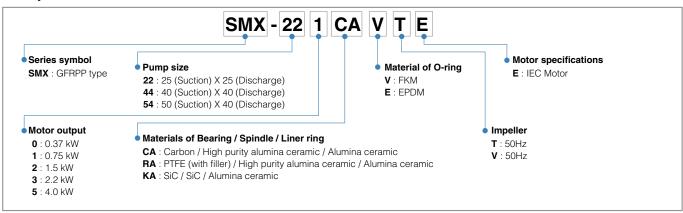

#### Precautions on the selection of pumps

- 1. The performance curves on this catalogue are based on the operation with 20°C clean water in flooded suction. Keep a margin (3% of the curves) when selecting the pump.
- 2.The magnetic pump cannot run continuously with a closed-discharge. Be sure to observe the minimum

The minimum flow rate SMX-22□:10L/min SMX-44∏:10L/min

SMX-54 : 20L/min

3. Select a pump model according to liquid specific gravity. Keep a margin (5% or more) for motor output.

Pump shaft power Sp  $\times$  Specific gravity  $\times$  1.05 or more (margin) ≤ Motor output

4. The self-priming performance (4m in 90 seconds) is based on the operation with 20°C clean water on the right piping condition. Self-priming performance varies with liquid temperature, characteristics and piping conditions. Obtain a rough guide of the highest possible self-priming height at each liquid specific gravity by the following formula.

The highest possible self-priming height[m] = Self-priming height with clean water[m] / Liquid specific gravity

#### Self-priming considerations

1.The diameter of the piping on the suction side should be the same as that of the pumps inlet port,


SMX-22 : 25mm

SMX-44 ☐: 40mm

SMX-54 ☐: 50mm

and the length of the piping should be limited to less than 4.7m. A larger pipe diameter or longer piping could adversely affect the self-priming performance, or could even hinder the self-priming process itself.


- 2.In cases where the liquid level fluctuates take the height from the lowest liquid level as the maximum self-priming height.
- 3. Always perform priming before first operation, and start the pump only after the pump chamber has been filled with the
- 4. To prevent early deterioration, avoid frequent start/stop of the pump.
- **5.**If a foot valve is installed on the suction pipe, pipe resistance may increase so that the pump cannot suck liquid enough

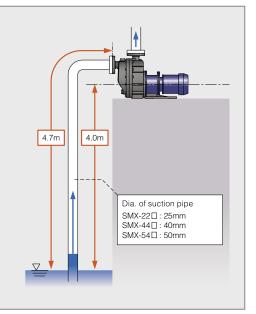



50Hz




#### **Performance curves**

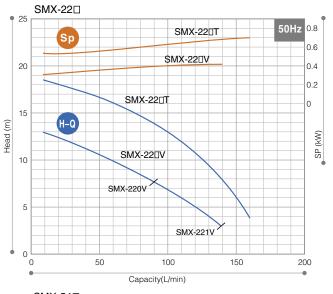

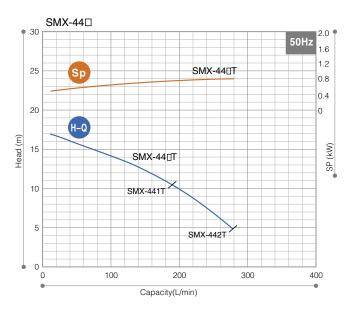

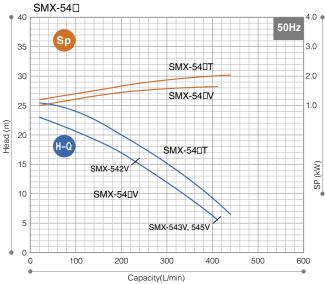

#### **Dimensions in mm**

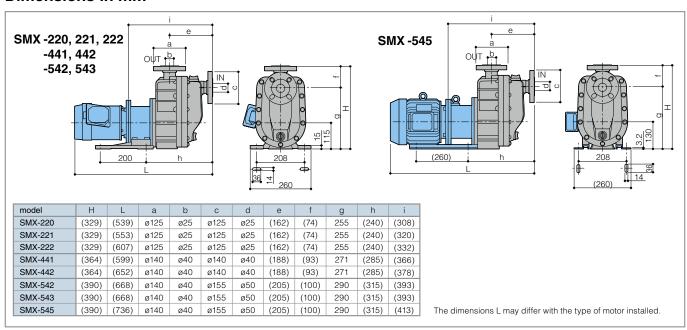

#### **Optional accessories**

#### Iwaki dry running protector DR series

Model DR is electric current sensing type dry running protector. It detects the decreased load current (lower limit) to stop the pump when it runs dry or runs with air sucking in. It can detect over-load, too.

- Current figure to be set is indicated on LCD.
- Both top/bottom figures can be set. Top:Over-load

Bottom:Dry running, air sucking-in operation, operation with suction side closed

- Built-in current transformer
- DIN rail mounting
- It is unable to use DR when inverter is employed in the system.



Specification 50H								
Model		DR-20						
Motor power		200 to 240V three phase	380 to 440V three phase					
Applied motor		0.37kW to 0.75kW	0.75kW to 15kW					
Power control		100V to 240V single phase						
Power	V	200V to 240V ±10%single phase						
I OWEI	Input	3.5W						
Detective current		0.5A to 32.0A						
Current transformar (CT)		Built-in						
Outer dimension		D80 X W153 X H122						

### Iwaki process magnetic drive pump series

#### MX/MX-F SERIES

Withstands difficult operating conditions and offers high efficiency



#### Specifications

• Max.discharge capacity: 500 L/min

- Max.head: 35 m
- Main materials: GFRPP (MX-F: CFRETFE)
- Liquid temp. range: 0 to 80 °C

#### **MXM** SERIES

Magnetic drive pumps with an excellent balance of features and performance



#### **Specifications**

- Max.discharge capacity: 600 L/min
- Max.head: 29 m
- Main materials: CFRETFE
  Liquid temp. range: -10 to 105 °C